

单面尺寸55*100MM, 摊开尺寸为275*100MM2024.8.29

| English

Original Instructions

GENERAL SAFETY WARNINGS

Please read the following safety warnings and the instructions carefully before using the appliance and keep for future reference.

- This appliance is intended for domestic household use only and should not be used for any other purpose or any other application, such as for non-domestic use or in a commercial environment.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, the installation of a residual current device (RCD) having a rated residual

1

| English

operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

⚠ WARNING!

- **Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.**
- Burn hazard. Keep appliances out of reach from young children, particularly during use and cool down.
- When the appliance is connected to the power supply, never leave it unattended.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

2

| English

⚠ WARNING!

Do not use this appliance near water.

- Always turn off and unplug the appliance when not in use or before cleaning.
- Take care to avoid contact between the hot surfaces of the appliance and the skin, paying particular attention to the face, neck, and hands.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not drop or insert any object into any opening.
- Do not leave the appliance unattended when plugged in.
- Use the appliance only for its intended use as described in this manual.
- Do not use the appliance with wet hands.

3


| English

- To protect against the risk of electric shock, do not immerse the appliance in water or any other liquid.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep your hair away from the immediate vicinity of the inlet opening to prevent it from being drawn in.

4

| English

SPECIFICATIONS

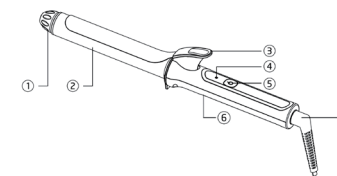


1. Safe insulated tip
2. Roller
3. Clip open device
4. On indicator
5. Switch (on/off) Plate
6. Handle
7. 360° rotatable power cord

5

| English

OPERATION PICTURE


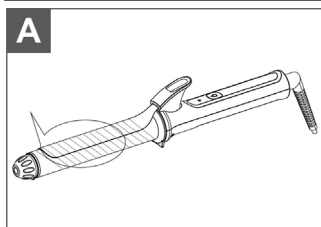


The shaded area represents the heated area. To avoid burns, do not touch these areas when the hair curler is turned on. (see Figure A)

6

| English

OPERATION PICTURE

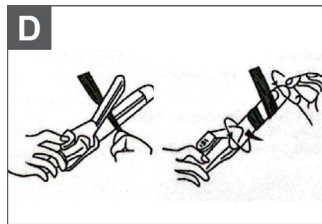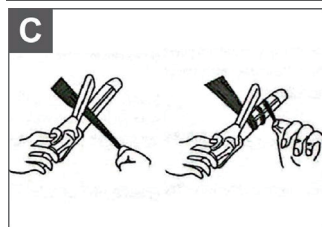

7

| English

OPERATION

Before use

1. Hair curlers use rated voltage.
2. The hair curler switch should be in the "⏻" off state.
3. The diameter of the curling barrel of the hair curler is 25mm, which is suitable for creating a medium curly hair style, or you can adjust the curl degree according to your own needs, bringing you professional and personalized functional services.

Usage method

1. Connect the plug to the power outlet.
2. Press the switch button "⏻". At this time, the working indicator light will turn on and the product will heat up.
3. After 39-60 seconds, when the curler reaches the curling styling temperature, you can start curling your hair with this product. Part your hair, starting at the ends, using hair tongs to hold part of the

8

| English

hair (up to a length of 3 to 4 cm wide). slowly bend the hair toward the root of the hair, and continue to bend the hair for 5-10 seconds before releasing it. For easier operation, it is best to hold the hair with the other hand (pay attention to prevent burns when using).

After use

1. Press the switch button "⏻" to turn off the hair curler and unplug the power plug.
2. Place the product on an insulated surface until it cools.
3. Clean the product with a dry cloth.
4. Store the product in a safe, dry, and clean location.

First use way (see Figure C)

1. Open the curling iron clamp and put hair between the curling iron clamp and the curling iron.
2. Wrap hair around the curling iron several times, then close the clip.

9

| English

Second use way (see Figure D)

1. Open the curling iron clamp and put hair between the curling iron clamp and curling iron.
2. Close the clip and wrap hair around the curling iron.

10