
INSTRUCTION MANUAL

Electric Oven

Model: GD48FL (CS)

Spec.: 220V, 50Hz, 2000 Watts



Read this booklet and follow all the instructions carefully

IMPORTANT SAFETY INSTRUCTIONS

When using your *Toaster Oven*, basic safety precautions should always be observed, including the following:

1.READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING OVEN.

2.Do not touch hot surfaces. Always use oven mitts when handling hot materials and allow betel parts to cool before cleaning. Always use the oven handles when moving the unit.

3.When the unit is not in use and before cleaning, press the “Start/Cancel” button and remove the oven from the power outlet. Allow the unit to cool thoroughly before putting in or taking off parts.

4.To protect against risk of electrical shock, do not immerse the cord, plug, or appliance in water or any other liquids.

5.Close supervision is always necessary when this or any appliance is used near children. This appliance is not for use by children.

6.Do not operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner. Return the oven to the nearest authorized service facility for examination, repair or adjustment.

7.Do not use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.

8.Do not use outdoors.

9.Do not use this appliance for other than its intended use.

10.Do not let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces.

11.Do not place the appliance near a hot gas or electric burner or in a heated oven.

12.Extreme caution should be used when using containers constructed of material other than metal or glass.

13.A fire may occur if the oven is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. Do not store any items on top of the appliance when in operation.

14.Do not store any materials other than manufacturer’s recommended accessories in the oven when not in use.

15.Do not place any of the following materials in the oven:cardboard, plastic, paper, or anything materials that may catch fire or melt.

16.Do not cover the oven tray or rack with metal foil. This will cause overheating of the appliance.

17.Oversized foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electrical shock.

18.**Do not** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.

19.Use extreme caution when removing the tray ,racks or disposing of hot grease or other hot liquids.

20.Always wear protective, insulated oven gloves or use a special handle when inserting or removing items from the hot oven.

21.Children should be supervised to ensure that they do not play with the appliance.

22. Keep the appliance and its cord out of reach of children less than 8 years.

23.The appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involve.

24.The temperature of accessible surfaces may be high when the appliance is operating.

25.The appliance shall be placed against a wall.

26.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

27.The appliances are not intended to be operated by means of an external timer or separate remote-control system.

28. Regarding the instructions for cleaning surfaces in contact with food thanks to refer to the below paragraph "cleaning" in manual.

29.The bread may burn, therefore do not use the appliance near or below combustible material, such as curtains.

30.This appliance is intended to be used in household and similar applications such as:


- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

31.Press the Start/Cancel button to begin or stop cooking function

Save these instructions, FOR HOUSEHOLD USE ONLY.

Getting To Know Your New Oven

MAIN COMPONENT:

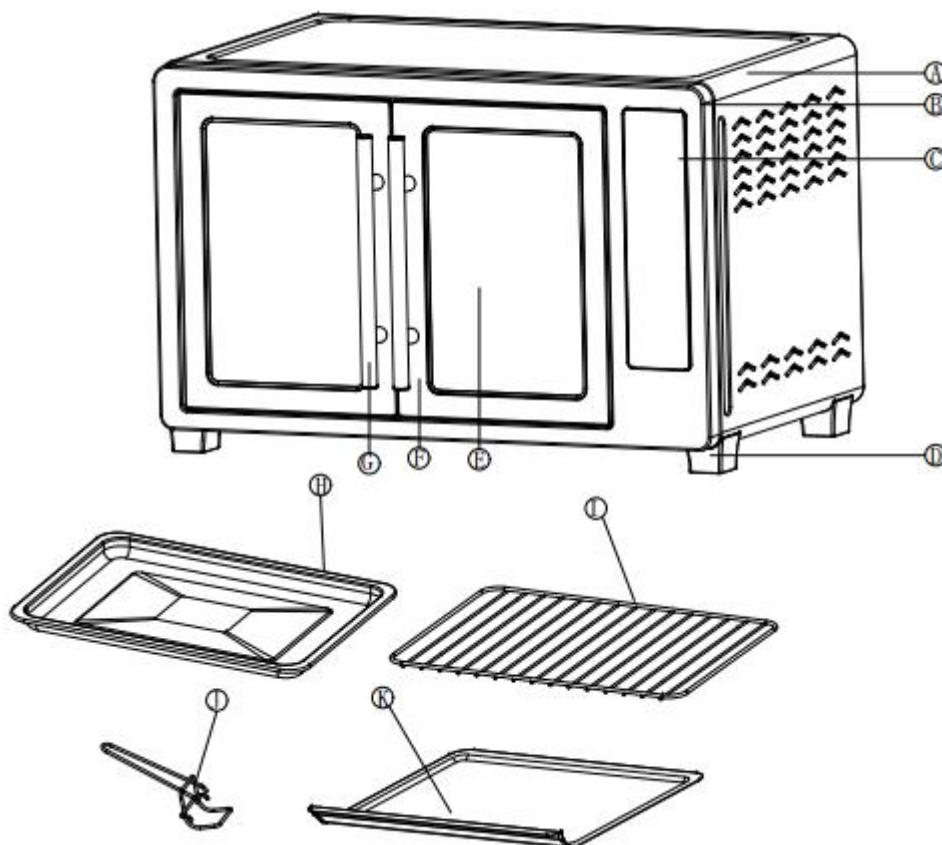

- A: Housing**
- B: Front panel**
- C: Display screen**
- D: Oven foot**
- E: Door glass**
- F: Door frame**
- G: Door handle**
- H: Bake tray**
- I: Wire rack**
- J: Tray handle**
- K: Crumb tray**
- L: Crumb tray**

LED DISPLAY



- Temperature, Time Display,
- Light Indicator

Menu

Time, Temperature + — buttons

- Light
- Start/Stop/Cancel

● **Function indicator:** TOAST, BAKE, ROAST, BAGEL, BROIL, PIZZA, DEHYD, COOKIES, FRIES, REHEAT, WINGS ,WARM

● **Bake Tray:** For use in broiling and roasting meat, poultry, fish and various other foods. Also to be used as a drip pan to catch the oil drippings.

● **Wire Rack:** For toasting, baking, and general cooking in casserole dishes and standard pans.

● **Tray Handle:** Allows you to pick up the bake tray when they are hot.

● **Crumb Tray:** Allows you to collect the residue of toast, pizza, cake etc or meat oil drippings.



Press the Oven Light button to turn the oven light on or off. If no operation is performed after the light is turned on, it will automatically turn off after 2 minutes.

The oven light turns on automatically during the last 1 minute of operation.

Technical Specifications

Voltage: 220V , 50Hz.

Power: 2000W

Before using your oven

▲ Before using your electric oven for the first time, be sure to:

1. Read all of the instruction included in this manual.
2. Make sure that the oven is unplugged.
3. Wash all the accessories in hot, soapy water or in the dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven, plug oven into outlet and you are ready to use your new toaster oven.
5. After re-assembling your oven, we recommend that you run it at the highest temperature (230°C) on the BROIL function for approximately 15 minutes to eliminate any packing residue that may remain after shipping. This will also remove all traces of odor initially present.

CAUTION: TO AVOID RISK OF INJURY OR BURNS,DO NOT TOUCH HOT SURFACES WHEN OVEN IS IN USE.ALWAYS TAKE EXTREME CARE WHEN REMOVING BAKE TRAY,WIRE RACK OR ANY HOT CONTAINER FROM A HOT OVEN,ALWAYS USE TRAY HANDLE OR OVEN MITT.

Instructions for Use

- After power is connected, the buzzer will beep once and the oven will enter standby mode.
- Press  button to activate the display; all button indicators will light up.
- Select the desired function mode. If no temperature or time adjustment is needed, press the Start button  directly to begin operation. If adjustment is needed, press the TEMP  or TIME  button, then use the adjustment keys to modify values. After setting, press the Start button  to start the oven.
- During operation, if you need to adjust temperature or time, press the TEMP or TIME button and use the adjustment keys to modify settings. If no operation is performed within 10 seconds after adjustment, the settings will be confirmed automatically and operation will resume.
- During operation, if you need to switch function modes, press the Pause button  first, select a new mode, then press the Start button  to continue.
- During operation, to cancel the current program, press and hold the Cancel button  for 1.5 seconds. The oven will stop working and return to the menu selection screen.
- Press the Oven Light button  to turn the interior light on or off. The light will automatically turn off if no operation is performed within 2 minutes after being turned on.

NOTE IN USING:

Preheating Function

- 1.All modes display **PrE** during preheating, indicating preheating is in progress.
Briefly press the  button during preheating to skip preheating and enter working mode directly.
- 2.When the oven temperature reaches the preheating temperature, the oven will **beep three times**, and the display will show “**Add Food**” and flash.After placing the food inside, press the  button to start the oven.If **no operation is performed within 10 minutes** while “Add Food” is displayed, the oven will automatically exit preheating and return to standby mode.

BUZZER SOUNDS

- 1.When the oven finishes preheating, the buzzer emits **3 short beeps** (0.2s per beep):
Beep! Beep! Beep!
- 2.When cooking is complete, the oven emits **3 continuous beeps** (1s per beep): Beep!
Beep! Beep!

COOKING FUNCTIONS:

No.	FUNCTION	DEFAULT TIME (MIN.)	TIME RANGE (MIN./HOUR)	DEFAULT TEMP. (°F)	TIME RANGE (MIN./HOUR)	PREHEAT	UPPER HEATER POWER	LOWER HEATER POWER
1	TOAST	4	P1-7 shades	HI (non-adjustable)	Default time per channel (room temperature): 1、 3'00" 2、 3'50" 3、 4'40" 4、 5'30" 5、 6'20" 6、 7'10" 7、 8'00"	NO	YES	YES
2	BAKE	30 min	1-60 min	180°C	65~230°C	YES	YES	YES
3	ROAST	50 min	1-60 min	200°C	65~230°C	YES	YES	YES
4	BAGEL	4	P1-7 shades	HI (non-adjustable)	Default time per channel (room temperature): 1、 4'00" 2、 4'40" 3、 5'20" 4、 6'00" 5、 6'50" 6、 7'40" 7、 8'30"	NO	YES	Pre: on End Pre: on/off=60s/60s
5	BROIL	15 min	1-60 min	230°C	65~230°C	YES	YES	Pre: on End Pre: on/off=60s/60s
6	PIZZA	15 min	1-60 min	230°C	65~230°C	YES	YES	YES

7	DEHYDRATE	12 hour	30min-72 hour	65°C	40°C~ 80°C	NO	YES	NO
8	COOKIES	10 min	1-60 min	180°C	65~230°C	YES	YES	YES
9	FRIES	25 min	1-60 min	220°C	65~230°C	YES	YES	YES
10	REHEAT	20 min	1-60 min	150°C	65~230°C	NO	YES	YES

Cleaning and maintenance

1.make sure the plug has been removed from the plug socket before cleaning the appliance.



2.Never use corrosive or scouring cleaning agents or sharp objects(such as knives or hard brushes)to clean the appliance.

3. never immerse the appliance, the power cord or the plug in water or any other fluid.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations

Never throw it away to the rubbish,so you will help to the improvement of the environment