 


Garment Steamer

Instruction Manual

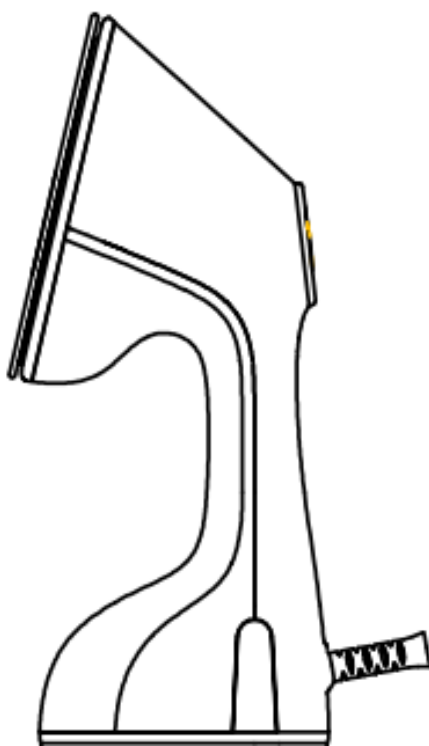 


Model no.:FG-536

220-240V-50-60Hz 2000W


PRODUCT DESCRIPTION

1. Steam panel
2. Handle
3. Removable water tank
4. LCD screen
5. rear cover
6. Cord exit
7. Water tank button

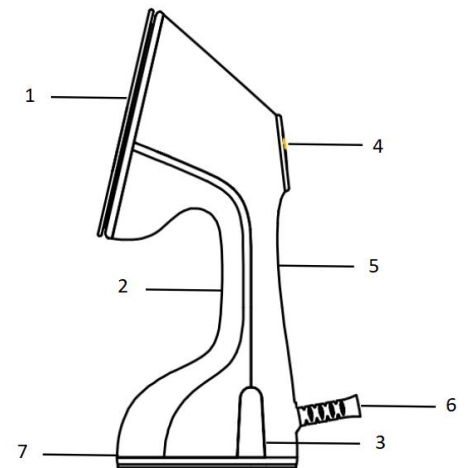

LCD screen

 1. Power indicator
2. Preheating
3. Small steam
4. Medium-grade steam
5. Big steam
6. Self-cleaning

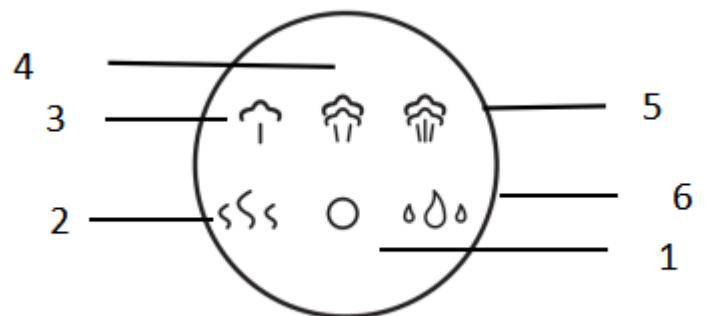

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Care should be taken when using the appliance due to the emission of steam.
- Always unplug the garment steamer before attaching or detaching the fabric brush during filling, cleaning and de-scaling.
- Carefully read all instructions before operating the handheld garment steamer for the first time and save for future reference.
- Any maintenance other than cleaning should be performed at an authorized service centre.
- Remove and safely discard any packaging material and promotional labels before using the garment steamer for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this garment steamer.
- Do not place the garment steamer near the edge of a bench or table during operation. ensure that the surface is level, clean and free of water and other substances.
- Always ensure the garment steamer is properly assembled before use. only use the attachments or accessories provided and specified in this book. follow the instructions provided in this book.
- Do not use outdoors or in bathrooms.
- Do not leave the garment steamer unattended when connected or in use.
- If the garment steamer is not used for an extended period, disconnect the garment steamer from the power outlet.
- Allow the garment steamer to cool completely before storing the garment steamer.
- Always place the garment steamer on its base when storing. Do not leave the garment steamer unattended while connected.
- Do not store the garment steamer with water in the water tank. always empty the tank after use.
- Do not touch hot surfaces. this garment steamer allows the user to garment steam with a large flow of steam. high temperatures are generated during use which could cause burns. always position your hands at the neck of the garment steamer when

holding it and warn others (especially children) of the possible dangers of burns from steam, hot water or hot parts, especially when garment steaming vertically.

- Store the garment steamer out of reach of children.
- The garment steamer must be used and rested on a stable surface.
- When placing the garment steamer on its base, ensure that the surface on which the base is placed is stable.
- The garment steamer is not to be used if the garment steamer has been dropped, if there are visible signs of damage or if it is leaking.
- The garment steamer is designed for household use and to be used with the tap water. do not put perfume, vinegar, or other chemicals in the tank. this appliance is not designed to work with these chemicals.
- Do not touch the steam head during use. when using the garment steamer, make sure the steamer head is facing away from you and in an upright position.
- Always test the garment steamer on a small discreet part of the fabric to be steamed to ensure the temperatures is not too high for the fabric.
- To prevent damage to the garment steamer do not use alkaline cleaning agents when cleaning; use a soft cloth and mild detergent.
- The garment steamer generates high temperature steam. do not touch the steam head during use. when using the garment steamer, make sure the steamer head is facing away from you and is an upright position.
- The garment steamer incorporates a thermal safety fuse to protect the garment steamer from over-heating. however the garment steamer should not be left unattended while it is connected to the power outlet. special care should always be taken when there are children in the home/vicinity of the garment steamer.
- Do not fill the water tank past the MAX indicator line as this may cause the water to leak.
- There may be leakage from the steam head if the garment steamer temperature is not high enough to vaporize water and create steam. therefore, ensure that the garment steamer is always preheated for 2-3 minutes prior to use.
- Never use the garment steamer while clothes are on the body or direct the steam towards people or animals.
- Do not allow the cord to touch hot surfaces.
- Keep the garment steamer clean. follow the cleaning instructions provided in this book.

Before first use

- When you first use the appliance, some smoke or a harmless odour may be produced or there may be a small discharge of particles. This will not affect the use of the appliance and will disappear quickly.

What water to use?

- Your appliance has been designed to use tap water. If your water is very hard, mix 50% tap water and 50% bottled demineralized water. Never use water containing additives

(starch, perfume, aromatic substances, softeners, etc) or condensation water(for example water from tumble dryers, water from refrigerators, water from air conditioning units, rainwater).This water contains organic waste materials or minerals that concentrate under the effect of heat and cause spitting, brown colouring or premature ageing of your appliance.

SAVE THESE INSTRUCTION

BEFORE USE

Remove any sticker or protective cover from the steam head.

Unwind and straighten the cord before use.

When operating the garment steamer for the first time, allow it to steam for a few minutes. This will remove any impurities and odours that might have been left by the manufacturing process.

When operating the garment steamer for the first time, you may want to try the steamer on an old piece of fabric before steamer on an old piece of fabric before steaming your garment.

Warning: to avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your garment steamer when it is in use.

 
Note: when unpacking the garment steamer, check to see you have received all the items listed in the parts list, before discarding the packaging.

Assembling/operating your garment steamer

1. The appliance must be unplugged. Press the water tank button, pull out the water tank, open the water inlet cover and fill tap water into the water tank until it reaches the MAXIMUM level. always ensure the water tank is at least a third full. Do not exceed the MAXIMUM level when filling the water tank. Put back the water tank .
2. Plug-in the appliance, the green of power indicator light will on and the red of Preheating light will be flashing ,appliance began to heating (approximately 20 seconds).When the red preheating light stop flashing into the red light long bright, that preheat finished, you can start using. The dry ironing function can be used.
3. Press the power indicator to switch to steam mode, The steam indicator light comes on,with three steam levels to choose from
- 4.When using steam mode you will feel vibrations and hear a subtle humming sound while steaming; this is normal, steam facing away from you and in an upright position.
- 5.Gently press the fabric brush against the garment, moving your arm in an up and down motion targeting creases in the fabric.
- 6.Press the power indicator to stop the steam.

NOTE: ensure that the fabric to be steamed is being stretched whilst steaming for best results.


WARNING: the garment steamer generates high temperatures of steam. do not touch the steam head, make sure the steamer is facing away from you in an upright position.

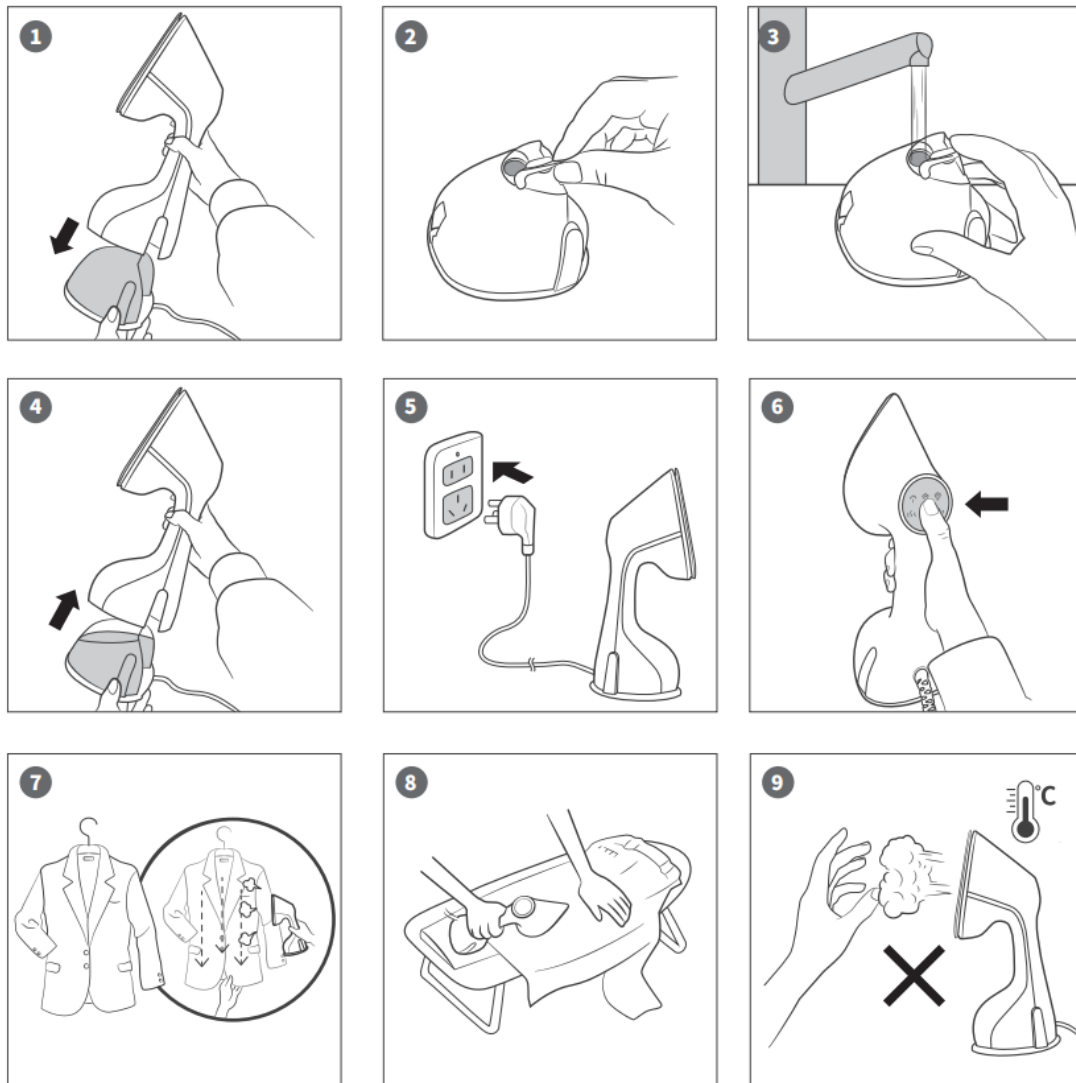

SELF-CLEANING


- Press and hold the power button for 3 to 5 seconds to enter the automatic cleaning mode, and the automatic cleaning indicator light will on, the automatic cleaning will last for one minute, Keep the panel facing down in a horizontal position during this period
Pay attention to the steam and spilled water droplets during the automatic cleaning process
- Only press the self-clean button when you want to active the self cleaning system. Never press the self-clean button when ironing

 The self-clean function removes scale and impurities. Use the self-clean function once every two weeks. If the water in your area is very hard, the self clean function should be used more frequently.

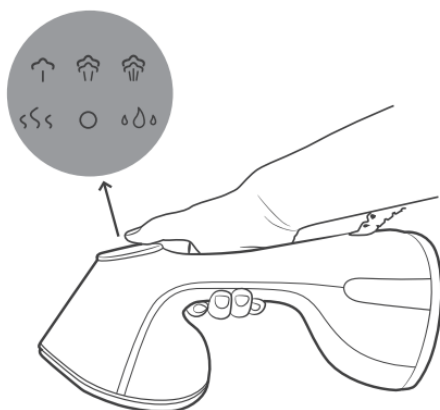

AFTER USE

 - Press the power button , turn off the steam mode, switch the power off at the power outlet and disconnect the power cord from the power outlet
- Open the water tank inlet and (over a sink or bucket) invert the water tank to empty the remaining water from the tank.
- Stand the garment steamer on its base, in an upright position, and allow to cool.

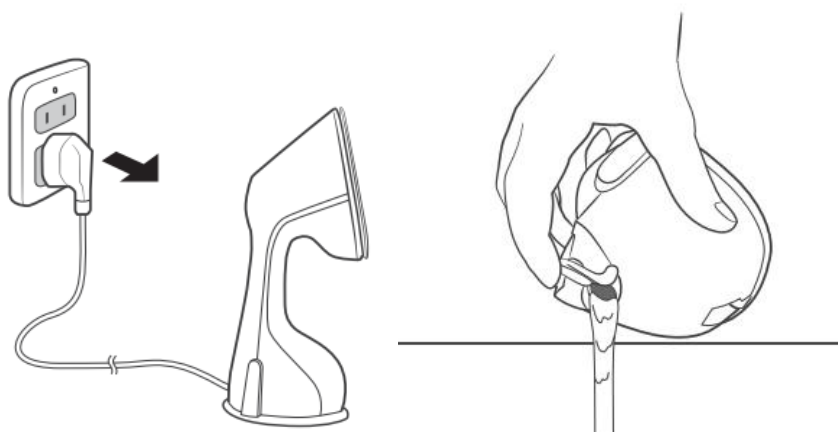

IS THERE A PROBLEM?

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
There is no steam	The appliance is not plugged in	Check that your appliance is correctly plugged in
	The water level is too low	Unplug your appliance and refill water
	The steam pump has not	Press the power indicator to

	been primed	begin steaming
	The water tank is not fully in place	Ensure that stopper is closed and that the water tank snaps when put into place
	The temperature is not reached	Wait around 20 seconds to use
The appliance does not heat	It is not plugged in	Plug in your appliance
Water leaks	The water tank is not fully in place or the stopper is not closed properly	Ensure that stopper is closed and that the water tank snaps when put into place
The appliance has abnormal sound	The water tank is not fully in place or the stopper is not closed properly	Ensure that stopper is closed and that the water tank snaps when put into place
	There is no water in water tank	Refill the water into the water tank